



## VF-G1000 Turnkey (Garmin G1000 Trainer model)

USER'S MANUAL  
Rev. 1.1 - September 2019

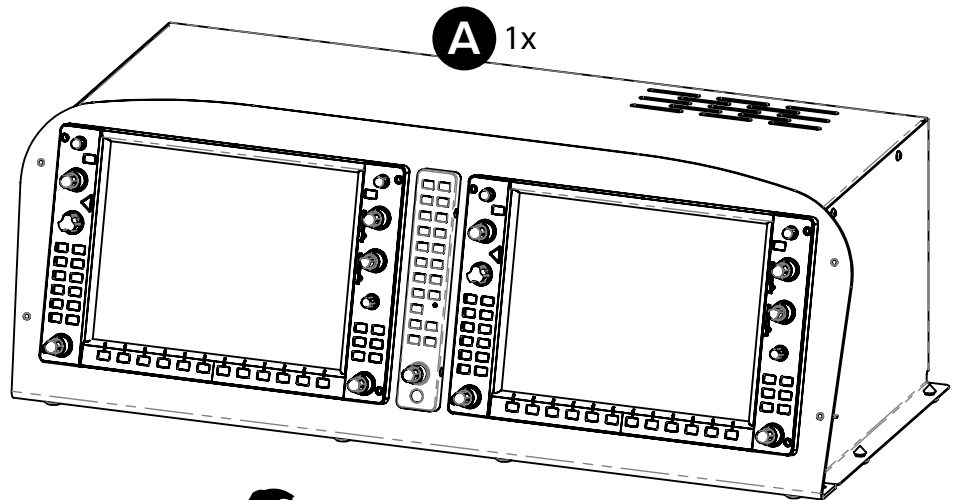

### 1. PACKAGE LIST


- A) VF-G1000 Turnkey (pack 1)
- B) Gaming Joystick (pack 2)

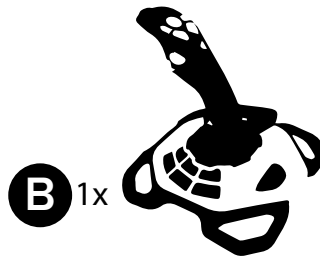

## 2. HOW TO START THE VF-G1000 Turnkey

### 2.1. CONNECT THE JOYSTICK

Connect the Joystick (sent in another package) via one of the back USB connector.

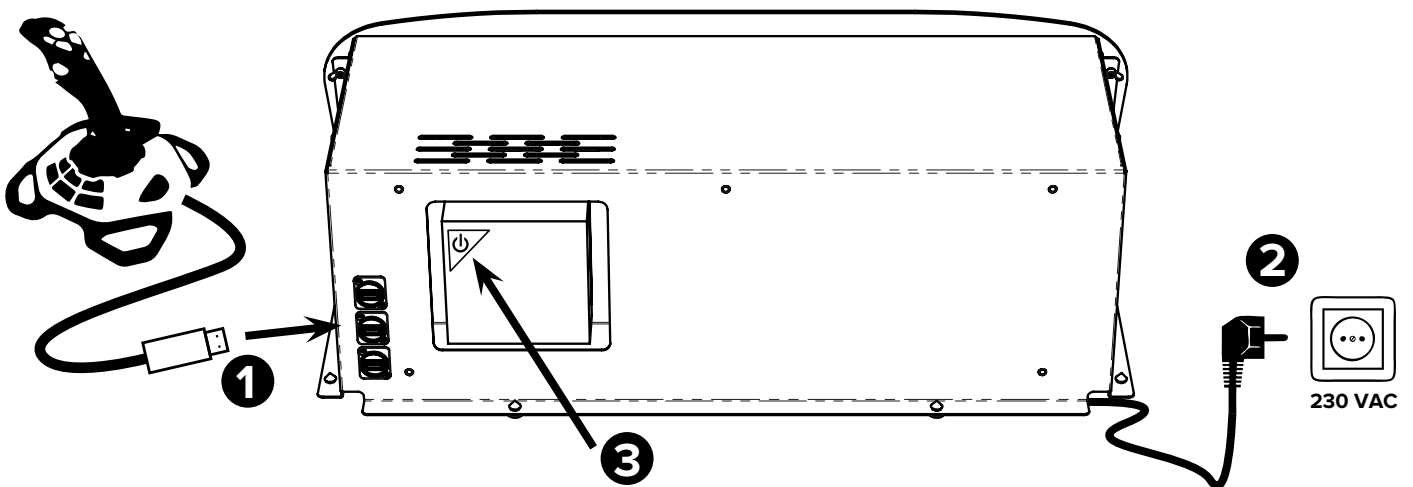

### 2.2. PLUG


Plug the VF-G1000 Turnkey in a wall power socket.

### 2.3. START PC

Press the start button of the miniPC and wait for it to boot completely. (1,5 minutes approximately).

## 2.4. ACTIVATE PANELS

Push the POWER ("Vol SQ") button in PFD and MFD panels, to activate the screens of the G1000.

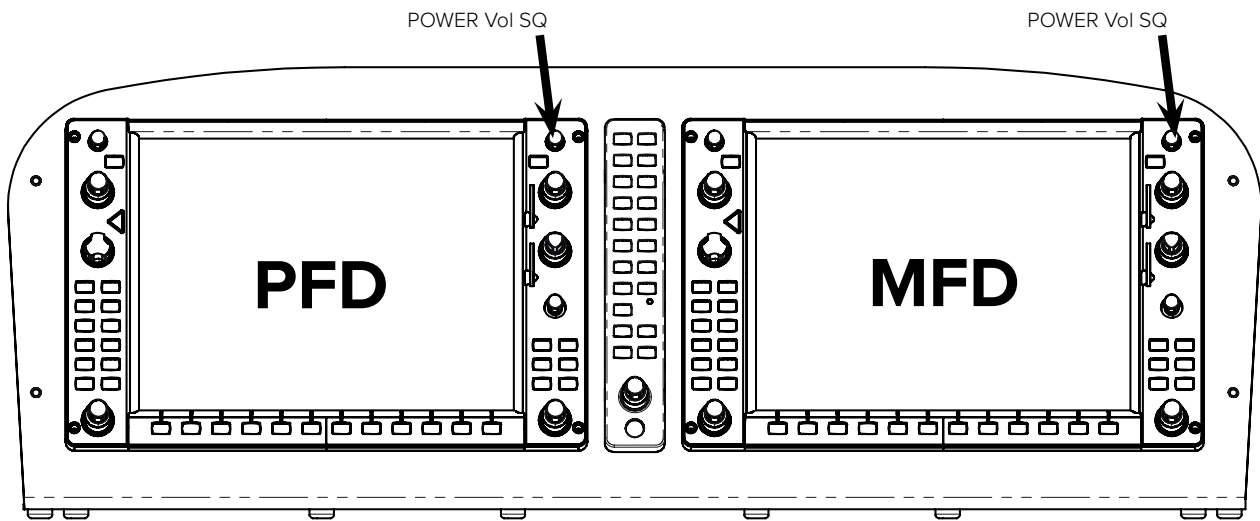

## 2.5. START THE FLIGHT PROCEDURES

The joystick is used to control the flight of the virtual plane. (You will see the flight parameters on PDF and MFD).

The axes of the Joystick are already configured: pitch, roll, rudder and throttle.

## 3. OTHER CONFIGURATION BUTTONS

### 3.1. TEAMVIEWER ACTIVATION/DEACTIVATION (Only in case you require technical support through remote session)

To activate/deactivate TeamViewer, you must press at the same time NAV & COM buttons.

### 3.2. SYSTEM STATUS DIALOG ACTIVATION/DEACTIVATION

To activate/deactivate Sistem Status Dialog, you must press at the same time ALT & FMS buttons.

### 3.3. SOUND SYSTEM ALERTS ACTIVATION

Sound system alerts are disabled by default. To enable sound system alerts, you have to activate the displays with the POWER ("Vol SQ") button, then disactivate, with the same button, and activate them again.

Second time you activate the displays, sound system alerts are enabled.

