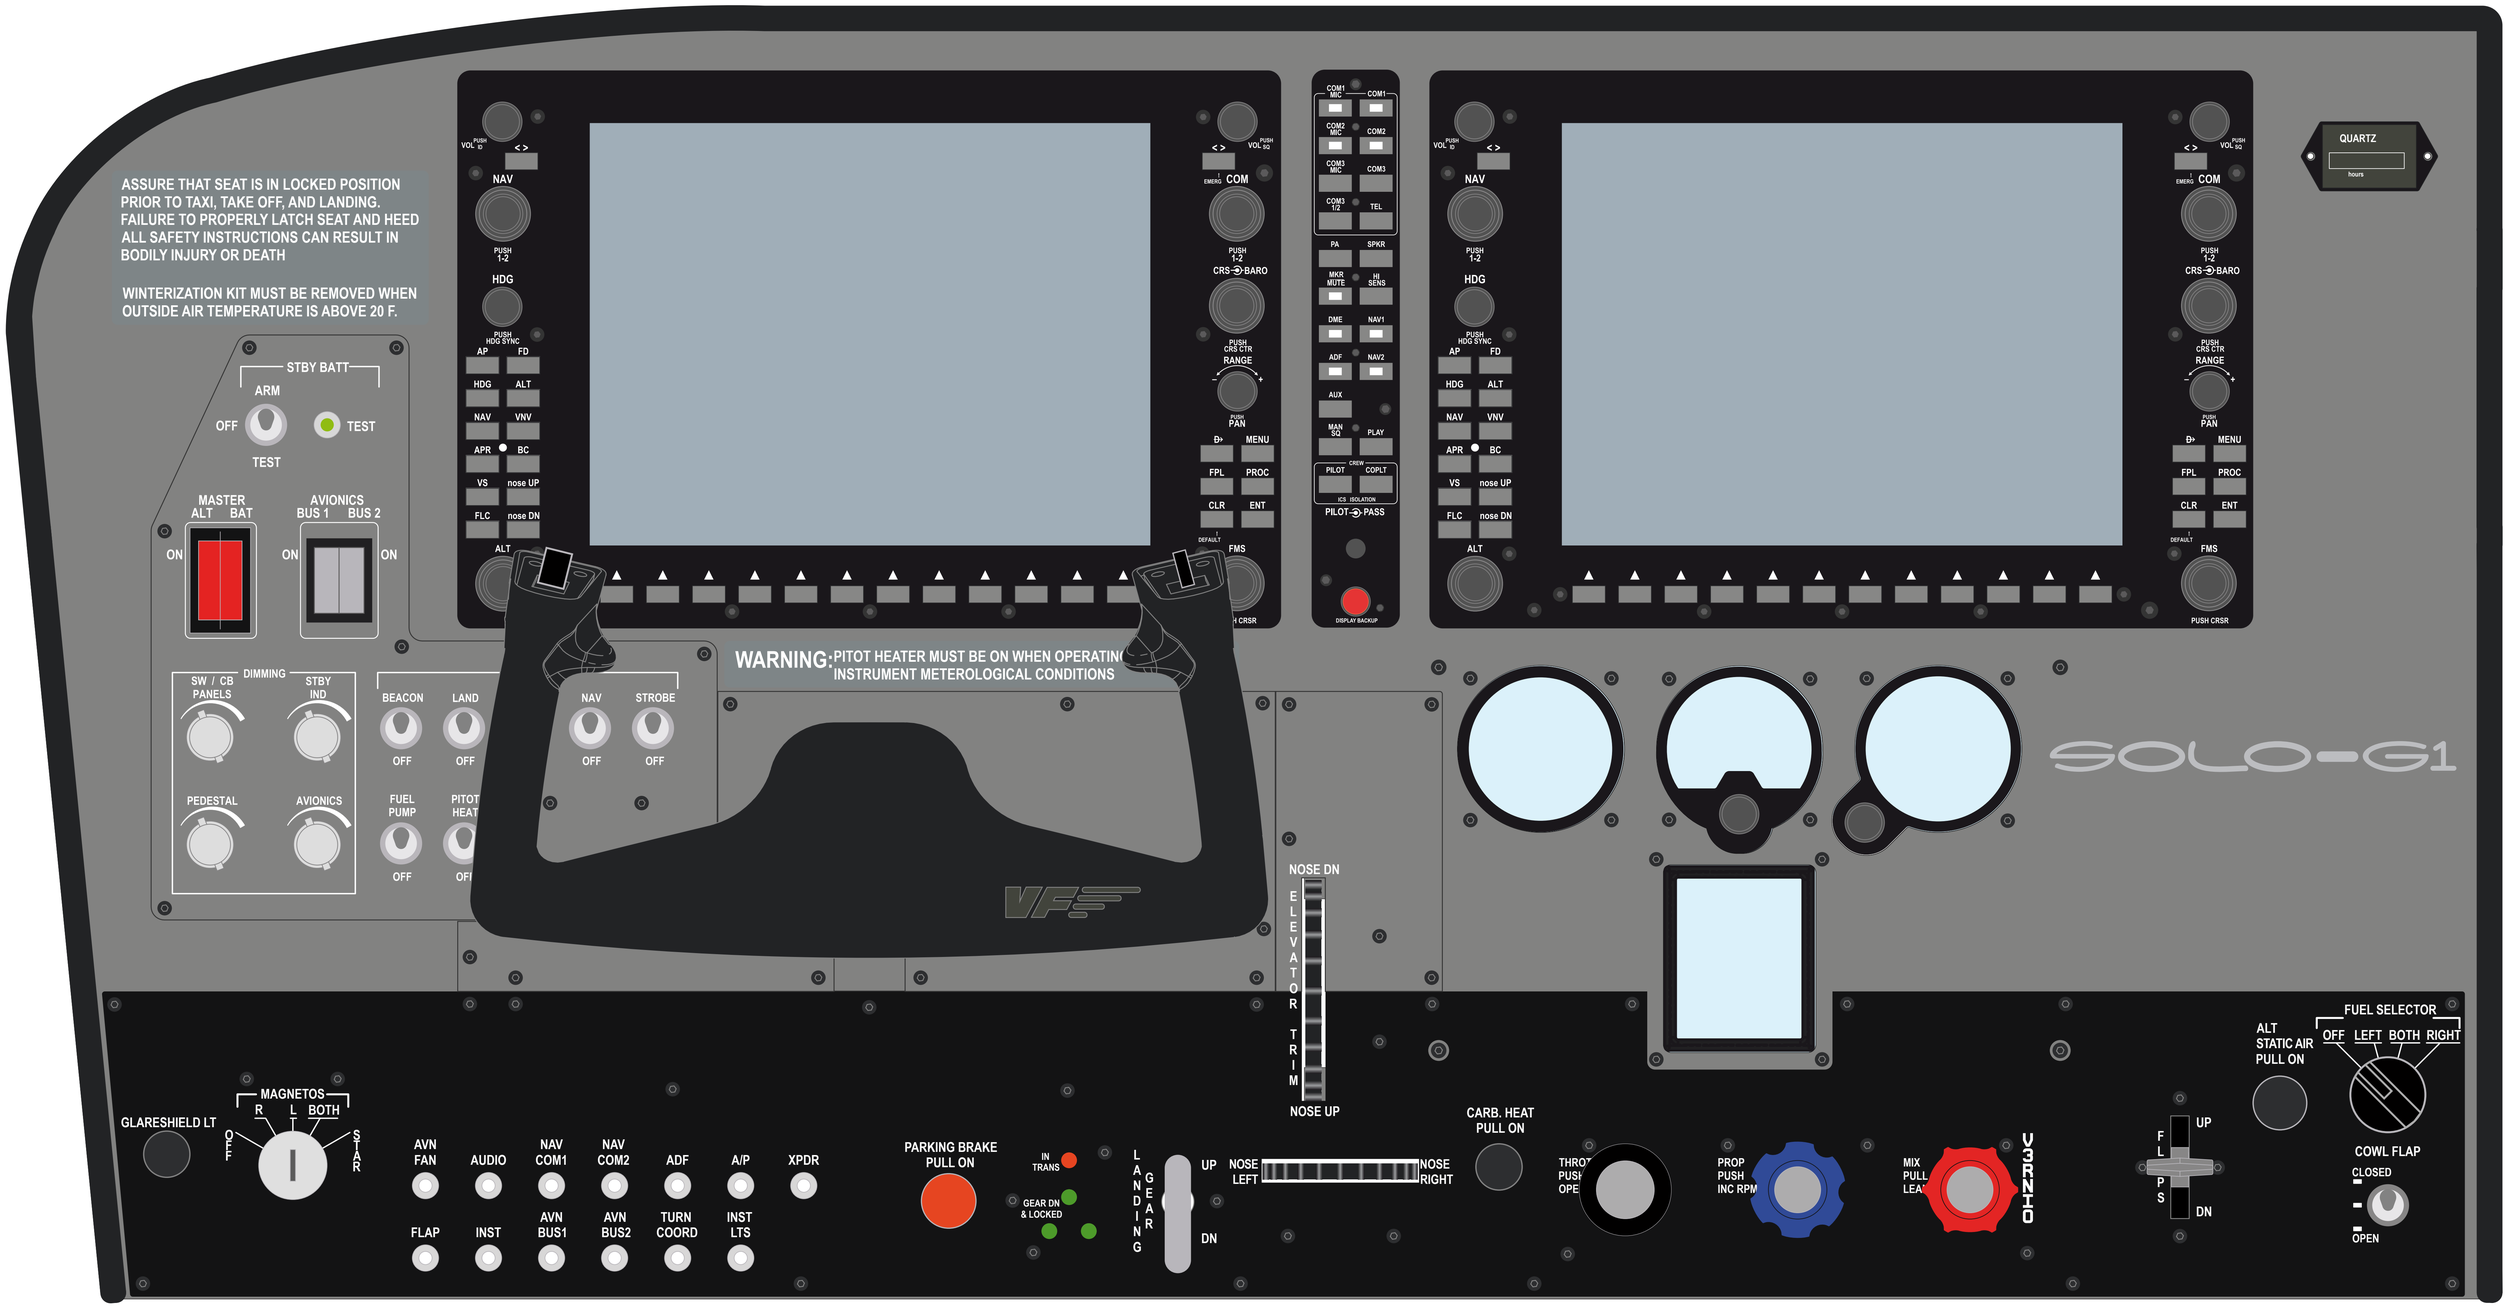
ASSURE THAT SEAT IS IN LOCKED POSITION PRIOR TO TAXI, TAKE OFF, AND LANDING. FAILURE TO PROPERLY LATCH SEAT AND HEED ALL SAFETY INSTRUCTIONS CAN RESULT IN BODILY INJURY OR DEATH
WINTERIZATION KIT MUST BE REMOVED WHEN OUTSIDE AIR TEMPERATURE IS ABOVE 20 F.
STBY BATT
ARM
OFF
TEST
TEST
MASTER
ALT BAT
ON
AVIONICS
BUS 1 BUS 2
ON
ON
DIMMING
SW / CB PANELS
STBY IND
PEDESTAL
AVIONICS
BEACON
LAND
OFF
OFF
FUEL PUMP
PITOT HEAT
OFF
NAV
STROBE
OFF
OFF
WARNING: PITOT HEATER MUST BE ON WHEN OPERATIN
INSTRUMENT METEROLOGICAL CONDITIONS
NAV
HDG
COM
CRS BARO
RANGE
PAN
MENU
FPL
PROC
CLR
ENT
FMS
PUSH CRSR
AP
FD
HDG
ALT
NAV
VNV
APR
BC
VS
nose UP
FLC
nose DN
ALT
COM1 MIC
COM1
COM2 MIC
COM2
COM3 MIC
COM3
TEL
PA
SPKR
MKR MUTE
HI SENS
DME
NAV1
ADF
NAV2
AUX
MAN SQ
PLAY
CREW
PILOT
COPLT
ICS ISOLATION
PILOT PASS
DISPLAY BACKUP
QUARTZ
hours
SOLO-G1
NOSE DN
ELEVATOR TRIM
NOSE UP
GLARESHIELD LT
MAGNETOS
OFF
R
L
BOTH
START
AVN FAN
AUDIO
NAV COM1
NAV COM2
ADF
A/P
XPDR
FLAP
INST
AVN BUS1
AVN BUS2
TURN COORD
INST LTS
PARKING BRAKE PULL ON
IN TRANS
GEAR DN & LOCKED
LANDING GEAR
UP
DN
NOSE LEFT
NOSE RIGHT
CARB. HEAT PULL ON
THROT
PUSH
OPE
PROP
PUSH
INC RPM
MIX
PULL
LEA
VERNIO
FLAPS
UP
DN
ALT STATIC AIR PULL ON
FUEL SELECTOR
OFF
LEFT
BOTH
RIGHT
COWL FLAP
CLOSED
OPEN